



AR-15 Picatinny Rails


Installation Instructions

**PART# A.5.10.1320, A.5.10.1330, A.5.10.1340,
A.5.10.1350, A.5.10.1351, A.5.10.1360, A.5.10.1361,
A.5.10.1365.**

(Fits: ATI 8-Sided Aluminum Forend, A.5.10.1420)

Thank you for purchasing an ATI product!

Advanced Technology
INTERNATIONAL

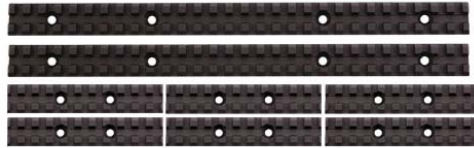

Picatinny Rails Installation

Point the firearm in a safe direction and place the safety in the "on" position. Next pull back the slide, and carefully inspect the chamber and magazine to be sure the firearm is unloaded.

WARNING

Tighten the hex screws until you feel a slight resistance. Do Not over tighten the set screws or you may strip the threaded forend holes. All screws are coated with dried Loctite so it is not necessary to over tighten. Stripped holes are NOT covered by the warranty.

Step #1

Begin by locating your desired position on the AR-15 forend for the picatinny rail attachment. Align the rail to the forend, and hold the rail in place.

Note: Be sure the existing openings on the forend correctly line up with the existing openings on the picatinny rail.



Figure 1

Step #2

With the rail in place, insert the supplied 10-32 by 3/8" flat head screw into the existing opening on the rail.

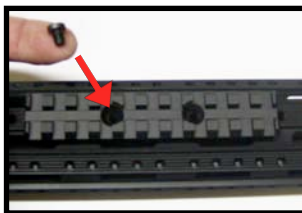


Figure 2

Step #3

Use an allen wrench to tighten the rail into place on the forend.

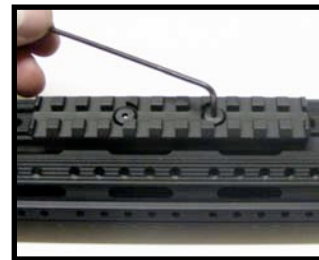


Figure 3

Step #4

Make sure the picatinny rail is tightly secure in place on forend. You are now ready to add the the low profile picatinny rail to your AR-15.

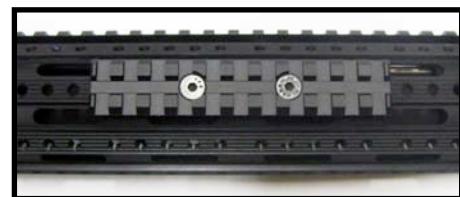


Figure 4

Advanced Technology International • Made In the USA • Limited Lifetime Warranty
2733 West Carmen Ave • Milwaukee, WI 53209
Toll Free: 800.925.2522 • Fax: 414.464.3112

www. ATIGunstocks.com



AR-15 Picatinny Rails

Installation Instructions

**PART# A.5.10.1320, A.5.10.1330, A.5.10.1340,
A.5.10.1350, A.5.10.1351, A.5.10.1360, A.5.10.1361,
A.5.10.1365.**

(Fits: ATI 8-Sided Aluminum Forend, A.5.10.1420)

Thank you for purchasing an ATI product!

Advanced Technology
INTERNATIONAL



Picatinny Rails Installation

Step #5

For low profile rail attachment, locate the low profile rail and align the rail to the top of the AR-15. Note: Be sure the existing openings on the top of the forend correctly line up with the existing openings on the rail.

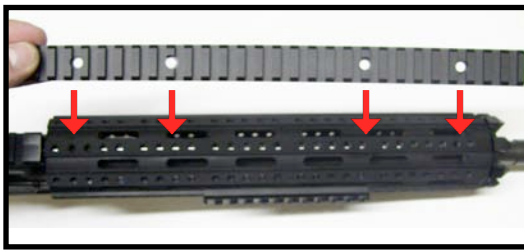


Figure 5

Step #7

Use an allen wrench to tighten the supplied screws and secure the low profile rail attachment in place on the forend.



Figure 7

Step #6

With the rail in place and aligned correctly, insert the supplied 10-32 1/4" button head screws into openings on the forend and low profile rail.

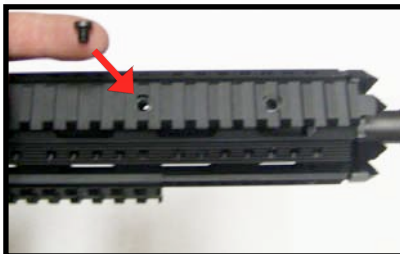


Figure 6

Step #8

Make sure the low profile rail is tightly secure to the top of the forend. You have now successfully installed ATI's low profile rail for your AR-15. Enjoy!

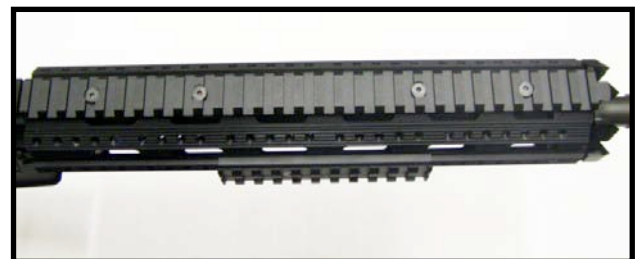


Figure 8

Advanced Technology International • Made In the USA • Limited Lifetime Warranty
2733 West Carmen Ave • Milwaukee, WI 53209
Toll Free: 800.925.2522 • Fax: 414.464.3112