



AR-15 Low Profile Picatinny Rail


Installation Instructions

PART# A.5.10.1351, A.5.10.1361, A.5.10.1365

(Fits:ATI AR Forends)

Advanced Technology
INTERNATIONAL

Thank you for purchasing an ATI product!

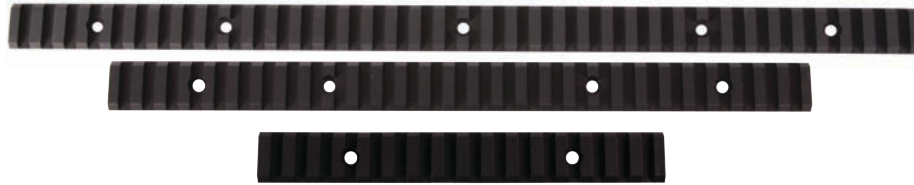

Picatinny Rail Installation

Point the rifle in a safe direction and place the safety in the "on" position. Next remove the magazine, pull back the bolt, and carefully inspect the chamber to be sure the rifle is unloaded.

Step #1

Install the new low profile picatinny rail by placing the low profile rail on the desire rail slot of the forend.

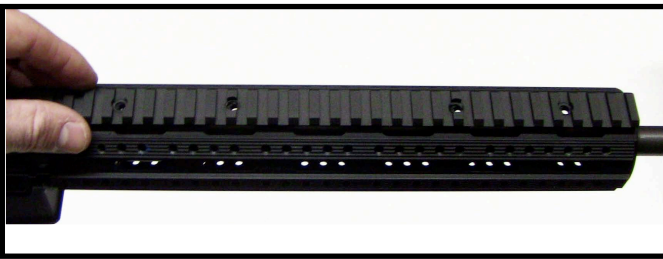


Figure 1

Step #2

Once placed onto the forend, check to see that the screw holes in the rail line up with the thread holes of the forend.

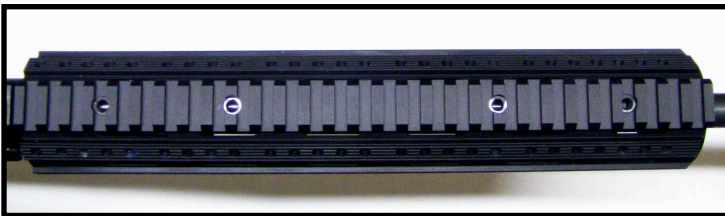


Figure 2

Step #3

Use the supplied 10-32 X 1/4" low head hex screw to tighten the rail to the forend using the proper allen wrench.



Figure 3

Warning: Tighten the hex screws until you feel a slight resistance. Do Not overtighten the screws or you may strip the threaded forend holes. Stripped holes are NOT covered by the warranty.

Step #4

When installing the last 10-32 X 1/4" low head hex screw, the one closest to the receiver, make sure that the screw doesn't interfere with the gas tube below the forend

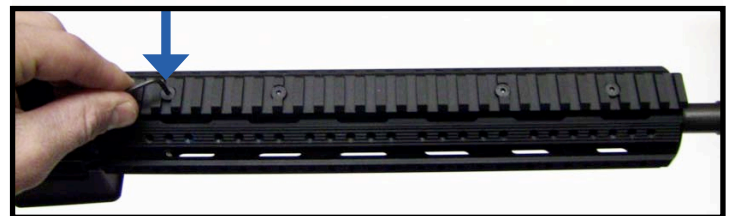


Figure 4

Advanced Technology International • Made In the USA • Limited Lifetime Warranty

2733 West Carmen Ave • Milwaukee, WI 53209

Toll Free: 800.925.2522 • Fax: 414.464.3112